














# GuangzhouLongyao Auto Parts

















## SENSOR CATALOG

















1. Warranty: 1 year or 30,000 mile

2. Delivery time: 7-15 days, according to your quantity

3. Payment terms: T/T or Western Union, Bank Transfer

















#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
<b>CRANKSHAFT SENSOR</b>				
1	90919-05047	CRANKSHAFT POSITION SENSOR		
2	90919-05067	CRANKSHAFT POSITION SENSOR		
3	90080-19024	CRANKSHAFT POSITION SENSOR		
4	37840-P0A-A01 37840-PAA-A01 37500-P0A-A01	CRANKSHAFT POSITION SENSOR		
5	90919-05030 90080-19013	CRANKSHAFT POSITION SENSOR		
6	90919-05048	CRANKSHAFT POSITION SENSOR		
7	90919-05005	CRANKSHAFT POSITION SENSOR		
8	029600-0580	CRANKSHAFT POSITION SENSOR		
9	19311-78010 029600-0570	CRANKSHAFT POSITION SENSOR		
10	37500-PHM-003	CRANKSHAFT POSITION SENSOR		
11	19311-78020	CRANKSHAFT POSITION SENSOR		
12	19300-97201	CRANKSHAFT POSITION SENSOR		
13	90919-05070	CRANKSHAFT POSITION SENSOR		

















#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
14	90919-05033	CRANKSHAFT POSITION SENSOR		
15	90919-05017	CRANKSHAFT POSITION SENSOR		
16	90919-05002	CRANKSHAFT POSITION SENSOR		
17	90919-05035 90919-A5001	CRANKSHAFT POSITION SENSOR		
18	90919-05012	CRANKSHAFT POSITION SENSOR		
19	90080-19009	CRANKSHAFT POSITION SENSOR		
20	90919-05052	CRANKSHAFT POSITION SENSOR		
21	90919-05028	CRANKSHAFT POSITION SENSOR		
22	19300-97202	CRANKSHAFT POSITION SENSOR		
23	90919-05020	CRANKSHAFT POSITION SENSOR		
24	90919-05025 90080-19010	CRANKSHAFT POSITION SENSOR		
25	90919-05018	CRANKSHAFT POSITION SENSOR		
26	37500-P72-A01	CRANKSHAFT POSITION SENSOR		
27	37500-P0G-A01	CRANKSHAFT POSITION SENSOR		
28	90919-05027	CRANKSHAFT POSITION SENSOR		
29	90919-05050	CRANKSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
30	90919-05056	CRANKSHAFT POSITION SENSOR		
31	90919-05069	CRANKSHAFT POSITION SENSOR		
32	90919-05072	CRANKSHAFT POSITION SENSOR		
33	90919-05006	CRANKSHAFT POSITION SENSOR		
34	90919-05023	CRANKSHAFT POSITION SENSOR		
35	90919-05037	CRANKSHAFT POSITION SENSOR		
36	90919-05021	CRANKSHAFT POSITION SENSOR		
37	90919-05011	CRANKSHAFT POSITION SENSOR		
38	90919-05034	CRANKSHAFT POSITION SENSOR		
39	90919-05044	CRANKSHAFT POSITION SENSOR		
40	39310-39800	CRANKSHAFT POSITION SENSOR		
41	39310-39010	CRANKSHAFT POSITION SENSOR		
42	39310-38060	CRANKSHAFT POSITION SENSOR		
43	39310-38070	CRANKSHAFT POSITION SENSOR		
44	MR560132 J5T20171	CRANKSHAFT POSITION SENSOR		
45	90919-05016	CRANKSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
46	23731-6N21A 23731-6N202 23731-6N205 23731-6N20A	CRANKSHAFT POSITION SENSOR		
47	12575482	CRANKSHAFT POSITION SENSOR		
48	12575481	CRANKSHAFT POSITION SENSOR		
49	19300-97204 029600-0950	CRANKSHAFT POSITION SENSOR		
50	37501-P8F-A01	CRANKSHAFT POSITION SENSOR		
51	90919-05071	CRANKSHAFT POSITION SENSOR		
52	23731-4M50C	CRANKSHAFT POSITION SENSOR		
53	37500-PLC-015	CRANKSHAFT POSITION SENSOR		
54	37500-PNA-003 37500-PNB-003	CRANKSHAFT POSITION SENSOR		
55	37500-RAA-A01	CRANKSHAFT POSITION SENSOR		
56	37501-P2J-J01	CRANKSHAFT POSITION SENSOR		
57	23731-4E810 23731-1B000	CRANKSHAFT POSITION SENSOR		
58	23731-9E000	CRANKSHAFT POSITION SENSOR		
59	37501-P8A-A01	CRANKSHAFT POSITION SENSOR		
60	23731-JA10B	CRANKSHAFT POSITION SENSOR		
61	23731-EN20A	CRANKSHAFT POSITION SENSOR		














#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
62	23731-3S500	CRANKSHAFT POSITION SENSOR		
63	23731-JA00A	CRANKSHAFT POSITION SENSOR		
64	23731-EA20A 23731-EA20C 23731-EA220 23731-EA221	CRANKSHAFT POSITION SENSOR		
65	90919-05043	CRANKSHAFT POSITION SENSOR		
66	23731-AA010 23731-AD200	CRANKSHAFT POSITION SENSOR		
67	55216915 0261210114	CRANKSHAFT POSITION SENSOR		
68	55189517 0261210124	CRANKSHAFT POSITION SENSOR		
69	23731-WD000	CRANKSHAFT POSITION SENSOR		
70	33220-80G00 J5T23891	CRANKSHAFT POSITION SENSOR		
71	33220-77E00	CRANKSHAFT POSITION SENSOR		
72	23731-EC00A 23731-EC01A	CRANKSHAFT POSITION SENSOR		
73	90919-05063	CRANKSHAFT POSITION SENSOR		
74	90919-05059	CRANKSHAFT POSITION SENSOR		
75	19311-97201 029600-1330	CRANKSHAFT POSITION SENSOR		
76	33220-70E00	CRANKSHAFT POSITION SENSOR		
77	12591007	CRANKSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
78	12588992	CRANKSHAFT POSITION SENSOR		
79	G4T07871 MR518300	CRANKSHAFT POSITION SENSOR / TRANSMISSION OUTPUT SPEED SENSOR		
80	MD303643	CRANKSHAFT POSITION SENSOR		
81	MD303649 J5T25081	CRANKSHAFT POSITION SENSOR		
82	MD330891	CRANKSHAFT POSITION SENSOR		
83	MR420734	CRANKSHAFT POSITION SENSOR		
84	MD187066	CRANKSHAFT POSITION SENSOR		
85	MD199399	CRANKSHAFT POSITION SENSOR		
86	MD342826	CRANKSHAFT POSITION SENSOR		
87	MD357274	CRANKSHAFT POSITION SENSOR		
88	MD319171	CRANKSHAFT POSITION SENSOR		
89	39310-39050	CRANKSHAFT POSITION SENSOR		
90	J5T25072	CRANKSHAFT POSITION SENSOR		
91	MR560276	CRANKSHAFT POSITION SENSOR		
92	MR560603	CRANKSHAFT POSITION SENSOR		
93	MD300101	CRANKSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
94	MD320754	CRANKSHAFT POSITION SENSOR		
95	MN158261 J5T25183	CRANKSHAFT POSITION SENSOR		
96	39310-33340	CRANKSHAFT POSITION SENSOR		
97	MD329924	CRANKSHAFT POSITION SENSOR		
98	SMW250627	CRANKSHAFT POSITION SENSOR		
99	MR507743 J5T25178	CRANKSHAFT POSITION SENSOR		
100	39180-23700	CRANKSHAFT POSITION SENSOR		
101	39180-23500	CRANKSHAFT POSITION SENSOR		
102	MD327122	CRANKSHAFT POSITION SENSOR		
103	23731-AL60C 23731-AL60A 23731-WL01A 23731-8J100	CRANKSHAFT POSITION SENSOR		
104	23731-8Y001 23731-8Y005 23731-8Y00A	CRANKSHAFT POSITION SENSOR		
105	ZL01-18-221 J5T27072 ZL01-18-221A	CRANKSHAFT POSITION SENSOR		
106	J5T27071 BP4W-18-221A BP4W-18-221B	CRANKSHAFT POSITION SENSOR		
107	MR578711	CRANKSHAFT POSITION SENSOR		
108	MD349080	CRANKSHAFT POSITION SENSOR		
109	MD301215	CRANKSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
110	MR578312	CRANKSHAFT POSITION SENSOR		
111	23731-2J615	CRANKSHAFT POSITION SENSOR		
112	J5T23381	CRANKSHAFT POSITION SENSOR		
113	029600-1290 97306113-1	8- CRANKSHAFT POSITION SENSOR		
114	PW811314	CRANKSHAFT POSITION SENSOR		
115	029600-0650 1275599 0	1275599- 1275599-7 CRANKSHAFT POSITION SENSOR		
116	949979-131 S8941-01570	CRANKSHAFT POSITION SENSOR		
117	8973121081 97312108-1	8- CRANKSHAFT POSITION SENSOR		
118	31935-3AX0B 621	RS- TRANSMISSION INPUT SENSOR / REVOLUTION SPEED SENSOR		
119	31935-3AX0A 620	RS- TRANSMISSION INPUT SENSOR / REVOLUTION SPEED SENSOR		
120	90919-05041 90919-05022	CRANKSHAFT POSITION SENSOR		
121	90919-05057	CRANKSHAFT POSITION SENSOR		
122	90919-A5003	CRANKSHAFT POSITION SENSOR		
123	90919-05045	CRANKSHAFT POSITION SENSOR		
<b>CAMSHAFT SENSOR</b>				



#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
124	23731-6N21A 23731-6N202 23731-6N205 23731-6N20A 23731-6N20B	CAMSHAFT POSITION SENSOR		
125	90919-05007	CAMSHAFT POSITION SENSOR		
126	90919-05013	CAMSHAFT POSITION SENSOR		
127	90080-19006	CAMSHAFT POSITION SENSOR		
128	37840-RJH-006 J5T23992 J5T23991 37840-PLC-006	CAMSHAFT POSITION SENSOR		
129	19300-74010	CAMSHAFT POSITION SENSOR		
130	23731-8H800 029600-1180	CAMSHAFT POSITION SENSOR		
131	90919-05003	CAMSHAFT POSITION SENSOR		
132	90919-05004	CAMSHAFT POSITION SENSOR		
133	90919-05040	CAMSHAFT POSITION SENSOR		
134	90919-05024	CAMSHAFT POSITION SENSOR		
135	39318-39800	CAMSHAFT POSITION SENSOR		
136	J5T26371A WLA1-18-221D WLA1-18-221C	CAMSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
137	90919-05026 90080-19014	CAMSHAFT POSITION SENSOR		
138	39310-39110	CAMSHAFT POSITION SENSOR		
139	MD300102	CAMSHAFT POSITION SENSOR		
140	23731-38U12 23731-38U01 23731-38U11	CAMSHAFT POSITION SENSOR		
141	90919-05036	CAMSHAFT POSITION SENSOR		
142	23731-6J90C	CAMSHAFT POSITION SENSOR		
143	12577245	CAMSHAFT POSITION SENSOR		
144	MD320622	CAMSHAFT POSITION SENSOR		
145	MD187067	CAMSHAFT POSITION SENSOR		
146	MD303644	CAMSHAFT POSITION SENSOR		
147	MD303088	CRANKSHAFT POSITION SENSOR		
148	39318-39150	CAMSHAFT POSITION SENSOR		
149	MD184055	CAMSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
150	39350-22600	CAMSHAFT POSITION SENSOR		
151	39350-23500	CAMSHAFT POSITION SENSOR		
152	MD303650	CAMSHAFT POSITION SENSOR		
153	39350-23700	CAMSHAFT POSITION SENSOR		
154	23731-4M500 23731-4M505 23731-4M506 23731-4M50B <del>23731-4M000</del>	CAMSHAFT POSITION SENSOR		
155	23731-AL61A 23731-4M560 23731-AL615 23731-AL616 <del>23731-AL616</del>	CAMSHAFT POSITION SENSOR		
156	23731-6J90B 23731-6J900 23731-6J905 23731-6J906	CAMSHAFT POSITION SENSOR		
157	23731-2Y52A 23731-2Y522 23731-2Y523 23731-2Y524	CAMSHAFT POSITION SENSOR		
158	90919-A5002	CAMSHAFT POSITION SENSOR		
159	37840-P8A-A01	CAMSHAFT POSITION SENSOR		
160	37510-RAA-A01	CAMSHAFT POSITION SENSOR		
161	23731-JA11A 23731-JA11B 23731-1KC1A	CAMSHAFT POSITION SENSOR		
162	39310-38050	CAMSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
163	MD327107 J5T23071A	CAMSHAFT POSITION SENSOR		
164	39350-37110	CAMSHAFT POSITION SENSOR		
165	PW550630	CAMSHAFT POSITION SENSOR		
166	33220-76G11	CAMSHAFT POSITION SENSOR		
167	949979-1300 8- 97606943-0 8976069430 S841- 01590 39350- 45700	CAMSHAFT POSITION SENSOR		
168	12598209 12577683	CAMSHAFT POSITION SENSOR		
169	12576607 24508913	CAMSHAFT POSITION SENSOR		
170	19300-50020	CAMSHAFT POSITION SENSOR		
171	J5T24091 22056-AA140	CAMSHAFT POSITION SENSOR		
172	8-98019024-0	CAMSHAFT POSITION SENSOR		
173	8-98014831-0 4657944	CAMSHAFT POSITION SENSOR		
<b>TPS &amp; ACCELERATOR PEDAL POSITION SENSOR</b>				
174	22620-4M501 22620- 4M511	Throttle Position Sensor		
175	JT6H 16402-REJ-W01	Throttle Position Sensor		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
176	JT6HB 16402-RAC-A02	Throttle Position Sensor		
177	JT7H RAC-A01      16402-	Throttle Position Sensor		
178	JT7HA RAA-A01      16402-	Throttle Position Sensor		
179	5019411AD	Throttle Position Sensor		
180	89452-32060	Throttle Position Sensor		
181	22633-AA151	Throttle Position Sensor		
182	SERA486-06 22620-65F20	Throttle Position Sensor		
183	SERA486-07 22620-4P21A	Throttle Position Sensor		
184	988F-9B989-BB/BA	Throttle Position Sensor		
185	SERA483-05 22620-31U00 22620-31U01	Throttle Position Sensor		
186	SERA483-06 13420-77E00	Throttle Position Sensor		
187	89452-22080 198500-3021	Throttle Position Sensor		
188	57540-13200-71 198500- 3160	Throttle Position Sensor		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
189	KL01-18-911 198500-3040	Throttle Position Sensor		
190	13420-60G00 198500-3100	Throttle Position Sensor		
191	89452-715T3 198500-480 5-	Throttle Position Sensor		
192	89452-30140 198500-3240	Throttle Position Sensor		
193	274030 198500-3220	Throttle Position Sensor		
194	89452-40020 198500-3230	Throttle Position Sensor		
195	89452-22100 198500-3290	Throttle Position Sensor		
196	97722-18400 198500-3271	Throttle Position Sensor		
197	57510-13300-71 198500-3050	Throttle Position Sensor		
198	198500-3300	Throttle Position Sensor		
199	89452-22090 198500-3011	Throttle Position Sensor		
200	97722-08400 198500-3270	Throttle Position Sensor		
201	89452-28090 198500-3170	Throttle Position Sensor		














#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
202	89452-53010 198500-3260	Throttle Position Sensor		
203	13420-50G00	Throttle Position Sensor		
204	MD628074	Throttle Position Sensor		
205	MD628077	Throttle Position Sensor		
206	89452-20130 198500-1071	Throttle Position Sensor		
207	89452-35020	Throttle Position Sensor		
208	ZJ01-18-911     198500- 1260	Throttle Position Sensor		
209	89452-22070 198500-1190	Throttle Position Sensor		
210	BP2Y-18-911 198500-1031	Throttle Position Sensor		
211	13420-65D00    13420- 52D00    13420-65D01	Throttle Position Sensor		
212	91175256	Throttle Position Sensor		
213	13420-52D01	Throttle Position Sensor		
214	58860-10920-71 big size	Throttle Position Sensor		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
215	13420-54G00 13420-54G01	Throttle Position Sensor		
216	13420-86G01	Throttle Position Sensor		
217	37890-PND-A01 JT6R	Throttle Position Sensor		
218	198500-3250	Throttle Position Sensor		
219	89452-20050	Throttle Position Sensor		
220	89452-33010	Throttle Position Sensor		
221	89452-12040	Throttle Position Sensor		
222	4716888 44449092 4444902 9102385 9101533	Angle Sensor		
223	58860-10920-71	Throttle Position Sensor		
224	MR578862	ACCELERATOR PEDAL TRAVEL SENSOR		
225	MR578861	ACCELERATOR PEDAL TRAVEL SENSOR		
226	58850-21320-71	Throttle Position Sensor / SENSOR ASSEMBLY (ASSY), ROTARY POSITION		
227	18919-5Y700	ACCELERATOR PEDAL CONTROL POSITION SENSOR		






#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
228	18919-6N201	ACCELERATOR PEDAL CONTROL POSITION SENSOR		
229	89441-5290B	ACCELERATOR PEDAL CONTROL POSITION SENSOR		
230	18919-VK500	ACCELERATOR PEDAL CONTROL POSITION SENSOR		
231	18919-AM810	ACCELERATOR PEDAL CONTROL POSITION SENSOR		
232	91A51-08400	ACCELERATOR PEDAL CONTROL POSITION SENSOR		
233	37971-RDJ-A01 37971-RBB-003 37971-PZX-003 37971-RCA-A01	ACCELERATOR PEDAL CONTROL POSITION SENSOR		
234	37971-RDJ-A01 37971-RBB-003 37971-PZX-003 37971-RCA-A01	ACCELERATOR PEDAL ASSEMBLY		
<b>MAP SENSOR</b>				
235	MR299300 E1T16671	MAP Sensor		
236	18590-76G50    079800- 4900	MAP Sensor		
237	89420-97205    079800- 5570	MAP Sensor		
238	18590-79F00    079800- 5050	MAP Sensor		
239	89390-1080A 079800-5890	MAP Sensor		
240	180220-0140 079800-5550	MAP Sensor		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
241	MK369080 079800-5580	MAP Sensor		
242	MK369081 079800-5590	MAP Sensor		
243	0281002576	MAP Sensor		
244	6G91-12T551-AB 5WK9700	MAP Sensor		
245	0261230133	MAP Sensor		
246	0281002437	MAP Sensor		
<b>KNOCK SENSOR</b>				
247	MR560037	Knock (Detonation) Sensor		
248	MD173144	Knock (Detonation) Sensor		
<b>SPEED SENSOR</b>				
248	89542-33070	ABS SPEED SENSOR		
249	89543-33070	ABS SPEED SENSOR		
250	89542-02080	ABS SPEED SENSOR		
251	89543-02080	ABS SPEED SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
252	89542-0D030	ABS SPEED SENSOR		
253	89543-0D030	ABS SPEED SENSOR		
254	89542-0R020	ABS SPEED SENSOR		
255	89543-0R020	ABS SPEED SENSOR		
256	89545-30070	ABS SPEED SENSOR		
257	89546-30070	ABS SPEED SENSOR		
258	89542-12700	ABS SPEED SENSOR		
259	89543-12700	ABS SPEED SENSOR		
260	89542-02100	ABS SPEED SENSOR		
261	89543-02100	ABS SPEED SENSOR		
262	57455-SDC-013(L)青	ABS SPEED SENSOR		
263	57450-SDC-013(R)黄	ABS SPEED SENSOR		
266	01M 927 321B 01M927321B	Transmission Output Sensor		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
267	31935-8E006 31935-8E004 G4T07481/A	Transmission Input / Output Sensor / Vehicle Speed Sensor		
268	31935-8E007 31935-8E005 G4T07571 G4T07581A	Transmission Input / Output Sensor / Vehicle Speed Sensor		
269	31935-1XF00	Transmission Input / Output Sensor / Vehicle Speed Sensor		
270	S8319-01360	SPEED SENSOR		
271	83181-37120	SPEED SENSOR		
272	S8319-01440	SPEED SENSOR		
273	S8319-01560	SPEED SENSOR		
299	6DCT450 1850527 7M5R-7H103-BA 7M5R-7H103-BB	SPEED SENSOR / Automatic Powershift Gearbox Speed Sensor		
300	24275800 24276628 6T45E 6T40E 7016A 0280	SPEED SENSOR / Transmission Vehicle Speed Sensor		

**OE STOCK 有OE库存的**

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价(RMB)
1	37510-PNA-003 37510-PNB-003	CAMSHAFT POSITION SENSOR		
2	37510-RB0-003	CAMSHAFT POSITION SENSOR		
3	37510-R40-A01	CAMSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
4	MR578768 J5T30771	CAMSHAFT POSITION SENSOR		
5	90919-05062 029600-1380	CRANKSHAFT POSITION SENSOR		
6	1865A069 J5T32571	CRANKSHAFT POSITION SENSOR		
7	MR567292 G4T07692A	CRANKSHAFT POSITION SENSOR / Transmission Input / Output Sensor / Vehicle Speed Sensor		
8	1865A126 J5T31972	CRANKSHAFT POSITION SENSOR		
9	33220-65J00 J5T32172 33220-63J00 J5T32171	CRANKSHAFT POSITION SENSOR		
10	39300-2A000	CRANKSHAFT POSITION SENSOR		
11	37510-RNA-A01	CAMSHAFT POSITION SENSOR		
12	31272689	CAMSHAFT POSITION SENSOR		
13	2872277 4921684 4921686 D4921684 5179099AA 5179099AB	CAMSHAFT POSITION SENSOR		
14	28820-PCJ-014	Transmission Input / Output Sensor / Vehicle Speed Sensor		
15	14180-13900-71	SPEED SENSOR		
16	37510-5A2-A01	CAMSHAFT POSITION SENSOR		

#	OEM#	DESCRIPTION 描述	REF. PIC.参考图	单价USD
17	28810-RZH-004	Transmission Input / Output Sensor / Vehicle Speed Sensor	